


Trainer remote wiring example.

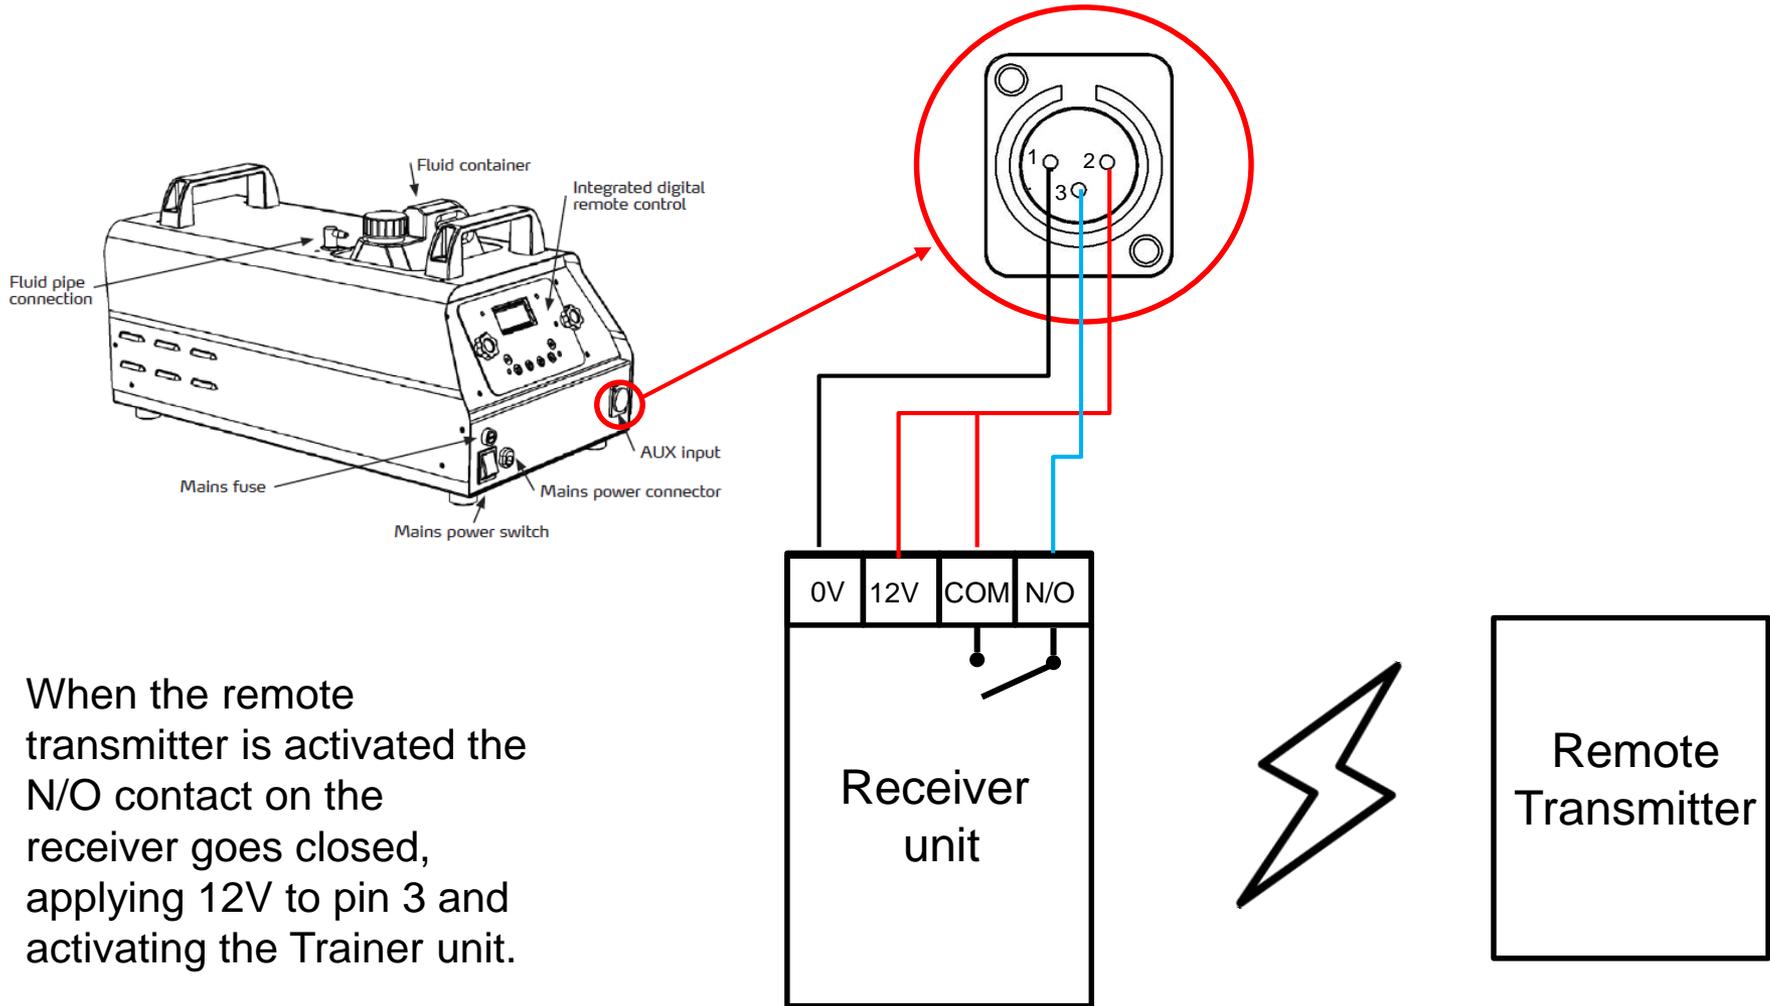

When the remote transmitter is activated the N/O contact on the receiver goes closed, applying 12V to pin 3 and activating the Trainer unit.